



























## 5.2 Remote Switching

These labels are for remote switching locations at any voltage.

### ARC FLASH AND SHOCK HAZARD APPROPRIATE PPE REQUIRED

Based on NFPA 70E-202 & XYZ Company Safety Directives

#### ARC FLASH PPE LEVEL 0:

Minimum PPE Rating = 1.2 cal/cm<sup>2</sup>

Remote Operation of Switching Device

# 0

#### CAUTION:

During Remote Breaker Switching,  
EVACUATE THE SUBSTATION.

The person switching should have an  
observer standing by the adjacent door.

#### CAUTION:

Ensure that all of the appropriate safety procedures  
are followed. The PPE Level designation on this  
equipment is based on the proper installation and  
maintenance of the up-line protective device.

\$(

XYZ0-R

### ARC FLASH AND SHOCK HAZARD APPROPRIATE PPE REQUIRED

Based on NFPA 70E-202 & X YZ Company Safety Directives

#### ARC FLASH PPE LEVEL 2:

Minimum PPE Rating = 8 cal/cm<sup>2</sup>

Remote Operation of Switching Device

# 2

#### CAUTION:

During Remote Breaker Switching,  
EVACUATE THE SUBSTATION.

The person switching should have an  
observer standing by the adjacent door.

#### CAUTION:

Ensure that all of the appropriate safety procedures  
are followed. The PPE Level designation on this  
equipment is based on the proper installation and  
maintenance of the up-line protective device.

\$(

XYZ2-R

### ARC FLASH AND SHOCK HAZARD APPROPRIATE PPE REQUIRED

Based on NFPA 70E-202 & X YZ Company Safety Directives

#### ARC FLASH PPE LEVEL 4:

Minimum PPE Rating = 40 cal/cm<sup>2</sup>

Remote Operation of Switching Device

# 4

#### CAUTION:

During Remote Breaker Switching,  
EVACUATE THE SUBSTATION.

The person switching should have an  
observer standing by the adjacent door.

#### CAUTION:

Ensure that all of the appropriate safety procedures  
are followed. The PPE Level designation on this  
equipment is based on the proper installation and  
maintenance of the up-line protective device.

\$(

XYZ4-R